


Configuration Sheet For OPOS Mode

Datalogic Gryphon GD4100

1. Set Default

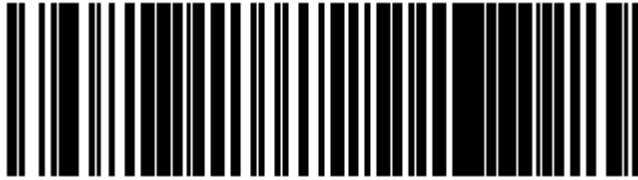

Standard Product Default Settings

Wait to finish Beeping

2. Enable USB-OEM (OPOS Ode)

USB-OEM

(can be used for OPOS/UPOS/JavaPOS)




Select USB-OEM

Wait to finish Beeping

WARNING - Only Scan the following barcode if you need to configure it back to USB keyboard mode (Default mode)

This mode is not compatible with Existco/Roshtek Solutions

USB Keyboard with standard key encoding

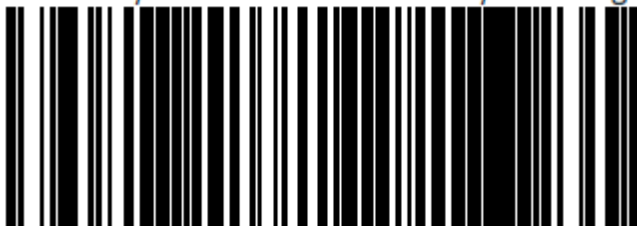

Select USB Keyboard