

Configuration Sheet For

Datalogic PM9500 Full Settings

1. Set Default



Restore Custom Default Configuration

2. Linking the Reader

Link Datalogic RF Devices to Base

For RF devices, before configuring the interface it is necessary to link the handheld with the base.

To link the handheld and the base, press the trigger to wake up the handheld, and mount it on the base. If the reader was previously linked to another base, you must first scan the **Unlink** bar code before re-linking to the new base.



Unlink

3. Set Date Time



Enter/Exit Programming Mode

4. Other Config Codes



Enter/Exit Programming Mode




Optional Add-Ons = Enable GS1-128



Global AIM ID = Disable



Label ID Transmission = Disable

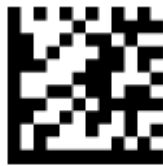

Enter/Exit Programming Mode

5. SET OPOS Mode USB-OEM



Select USB-OEM

Make sure you installed Datalogic OPOS Drivers before scanning this barcode.

Drivers available from this Link (You need opos drivers):

<http://www.datalogic.com/eng/products/automatic-data-capture/industrial-handheld-scanners/powerscan-pm9500-dpm-evo-pd-631.html#download>