

Configuration Sheet For

Datalogic PM9500 Full Settings

1. Set Default



Restore Custom Default Configuration

2. Linking the Reader

Link Datalogic RF Devices to Base

For RF devices, before configuring the interface it is necessary to link the handheld with the base.

To link the handheld and the base, press the trigger to wake up the handheld, and mount it on the base. If the reader was previously linked to another base, you must first scan the **Unlink** bar code before re-linking to the new base.



Unlink

3. Set Date Time



Enter/Exit Programming Mode

2. Scan the Set Date bar code + six digits for Year, Month and Day (YYMMDD) from Appendix D, Keypad.



Set Date



Set Time

3. Scan Set Time + six digits for Hours, Minutes and Seconds (HHMMSS) from Appendix D, Keypad.

See next Page for Keypad for numbers Barcodes



Enter/Exit Programming Mode



0



1



2



3



4



5



6



7



8



9

4. Other Config Codes



Enter/Exit Programming Mode



Optional Add-Ons = Enable GS1-128



Global AIM ID = Disable



Label ID Transmission = Disable



Set AIM ID Individually for GS1-128 = Disable




Enter/Exit Programming Mode

5. SET USB-COM Serial



Select USB COM-STD^a

6. Set Prefix

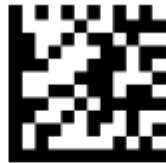

Enter/Exit Programming Mode



Set Global Prefix



0



2

MUST SCAN Enter /Exit Programming Mode Twice



Enter/Exit Programming Mode



Enter/Exit Programming Mode

7. Set Suffix



Enter/Exit Programming Mode



Set Global Suffix



0



D



0



A

MUST SCAN Enter /Exit Programming Mode Twice



Enter/Exit Programming Mode



Enter/Exit Programming Mode