

Configuration Sheet For Datalogic QBT2430 PCS V2

1. Set Default



Restore Custom Default Configuration

Wait to finish Beeping

2. Disable Heads and Terminators not needed



Enter/Exit Programming Mode



Label ID Transmission = Disable



Global AIM ID = Disable



Source Radio Address Transmission = Do Not Include



Set AIM ID Individually for GS1-128 = Disable



GS1-128 = Transmit in Code 128 data format



Enter/Exit Programming Mode



Enter/Exit Programming Mode

Wait to finish Beeping

3. Set USB-OEM OPOS



USB-OEM
(can be used for OPOS/UPOS/JavaPOS)

Select USB-OEM

4. Re-Link (Only if needed)



Unlink

For RF devices, before configuring the interface it is necessary to link the handheld with the base.

To link the handheld and the base, press the trigger to wake it and place it on the base.

If the reader was previously linked to another base, you must first scan the Unlink action command before re-linking to the new base.