



Select USB-COM-STD^a

USB Com to simulate RS-232 standard



Enter/Exit Programming Mode



Label ID Transmission = Disable



Global AIM ID = Disable



Source Radio Address Transmission = Do Not Include



Set AIM ID Individually for GS1-128 = Disable



GS1-128 = Transmit in Code 128 data format



Set Global Prefix



0



2



Enter/Exit Programming Mode



Enter/Exit Programming Mode

Wait to finish Beeping



Enter/Exit Programming Mode



Set Global Suffix



0



D



Enter/Exit Programming Mode



Enter/Exit Programming Mode