

Existco Plant Control System V1

Configure Scanner to USB COM

ASCII Character Set for RS-232

The values in [Table 7-4](#) can be assigned as prefixes or suffixes for ASCII character data transmission.

Table 7-4 ASCII Character Set for RS-232

ASCII Value	Full ASCII Code 39 Encode Character	ASCII Character
1000	%U	NUL
1001	\$A	SOH
1002	\$B	STX


1



Scan Prefix
(07h)

Scan Barcode According to Sequence. Scan Step 1-10.
Step 3 / 4 scan nthe same barcode Twice

2

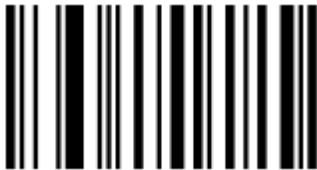

1

3

4



0

5



2

ADD AN ENTER KEY (Carriage Return/Line Feed)

To add an Enter key after scanned data, scan all **THREE** bar codes in numerical order.

6

1



SCAN OPTIONS

7

2



<DATA><SUFFIX 1>

8

3



ENTER

Scan Data Transmission Format (continued)

9



<PREFIX> <DATA> <SUFFIX 1>
(05h)

USB

Scan *ONE* of the bar codes below



HID KEYBOARD EMULATION



IBM HAND-HELD USB



IBM TABLE TOP USB



USB OPOS HAND-HELD



SNAPI WITHOUT IMAGING
(For use with hands-free base only)



SIMPLE COM PORT EMULATION



USB CDC Host

10