

Configuration Sheet For
Zebra Motorola Symbol Zebra DS3678
To Work with Existco Plant Control System

1. Scan barcode in cradle then place unit in cradle and wait for beep (Binding)
2. Restore Defaults



*** Restore Defaults**

3. USB OPOS



USB OPOS Hand-held

4. Disable Small Barcodes only Read 2D Datamatrix Barcode



Disable EAN-13/JAN-13
(0)



***Disable Interleaved 2 of 5**
(0)



Disable GS1 DataBar Omnidirectional
(0)