

# OPOS Scanner configuration


## Datalogic GM4100



Select USB-OEM




ENTER/EXIT PROGRAMMING MODE

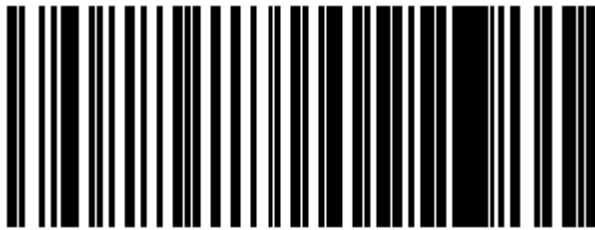

Global AIM ID = Disable



GS1-128 AIM ID = Disable

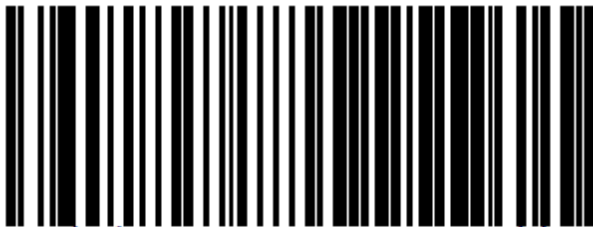

Label ID Transmission = Disable



ENTER/EXIT PROGRAMMING MODE